

PART NUMBER

PFF5-401

DESCRIPTION

FRONT RADIUS ARM TO CHASSIS BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 4 x Outer Shells 4x Zinc Plated Washers
 2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original bush from the arm.
2. Clean any dirt or burrs from the bore in the arm. Remove any sharp edges with a rounded file.
3. Press the plated steel outer shells into each side of the arm, until sitting flush to the face of the arm as shown in figure 2.
4. Apply some washing up liquid to the bore of the shells and press the polyurethane bush in until fully through the arm, figure 3.

Tip: If you are having trouble pressing the bush in, try pressing the bush in at a slight angle so that one part of the lip is already in the bore of the shell, and when steady pressure is applied, the rest of the lip should follow.

5. Apply the supplied grease to the bore and the mounting faces of each bush.
6. Fit the Stainless-Steel sleeve into the bushes.
7. Place a washer on either face of the bush after applying grease to the faces of the bushes.
8. Tension all hardware to manufacturers recommended torque settings.



Zinc Plated Washer Stainless Steel Sleeve

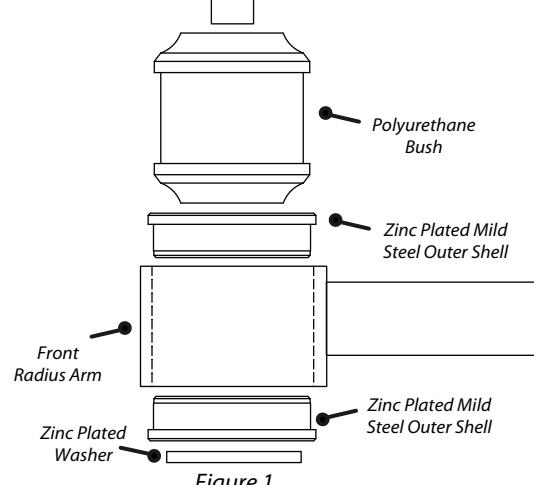


Figure 1



Figure 2



Figure 3