

# POWERFLEX®

## PART NUMBER

# PFF60-601

## DESCRIPTION

### FRONT LOWER WISHBONE FRONT BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane Bushes     1 x PTFE/Silicone Grease

2 x Aluminium Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original bush from the arm, but retain the outer shell.
2. Remember to clean away any dirt and corrosion.
3. Apply some of the powerflex grease to the bushes and push them in where the original bushes were. See figure 1.
4. Apply some of the powerflex grease to the bore of the bush and insert the sleeve so that it sits flush.
5. Re-fit arm to the vehicle and tension all hardware to manufacturers recommended torque settings.

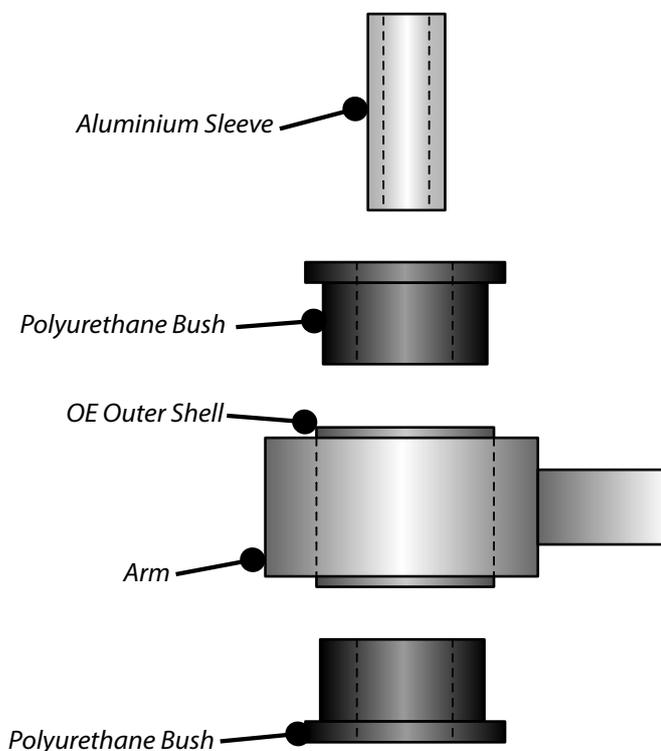


Figure 1