

POWERFLEX®

PART NUMBER

PFR2-111

DESCRIPTION

REAR LOWER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

8 x Polyurethane Bushes 2 x PTFE/Silicone Grease

4 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove rear lower wishbone from vehicle.
2. Carefully remove OEM bush from the inside positions of the wishbone. Delicate use of a workshop press is recommended, and ensure the arm is well supported around it's circumference.
3. Clean bore of wishbone and remove any burrs or sharp edges.
4. Push the Polyurethane bushes into place in the wishbone bores (Figure 1).
5. Apply the supplied grease liberally into the knurled bore and outside faces of the bushes and the outside of the sleeves.
6. Push the sleeves into the bushes (Figure 1).
7. Refit the arm to the car, ensuring to tighten all hardware to manufacturers recommended torque settings.

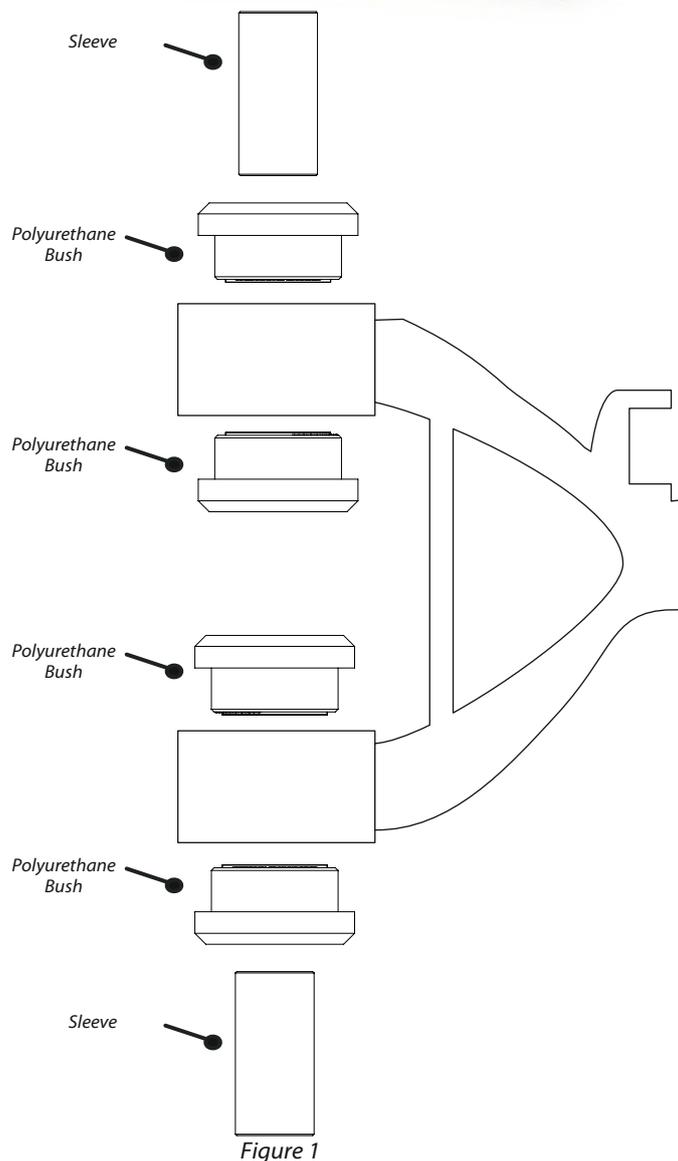


Figure 1