

POWERFLEX®

PART NUMBER

PFR27-411

DESCRIPTION

REAR DIFF STRUT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 8 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 4 x Stainless Steel Sleeves
- 4 x Mild Plated Outer Sleeves
- 8 x Mild Plated Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the rear differential strut from the car, taking care to retain the original fasteners.
2. Using a press tool, remove the original bushes from both ends of the arm.
3. Wipe away any rust and dirt from the bores of the arm.
4. Using a press tool, press the mild steel outer shells into both bores of the arm.
5. Push the Polyurethane bushes into the outer shells.
6. Apply some of the supplied grease to bore of the Polyurethane bushes and to the outside of the metal sleeves.
7. Press the metal sleeves into the bore of the Polyurethane bushes.
8. Using the original fasteners and the supplied washers, refit the strut into the mounting brackets on the car.
9. Tighten all fasteners to manufacturer recommendations.
10. Repeat the process for the differential strut on the opposite side of the car.

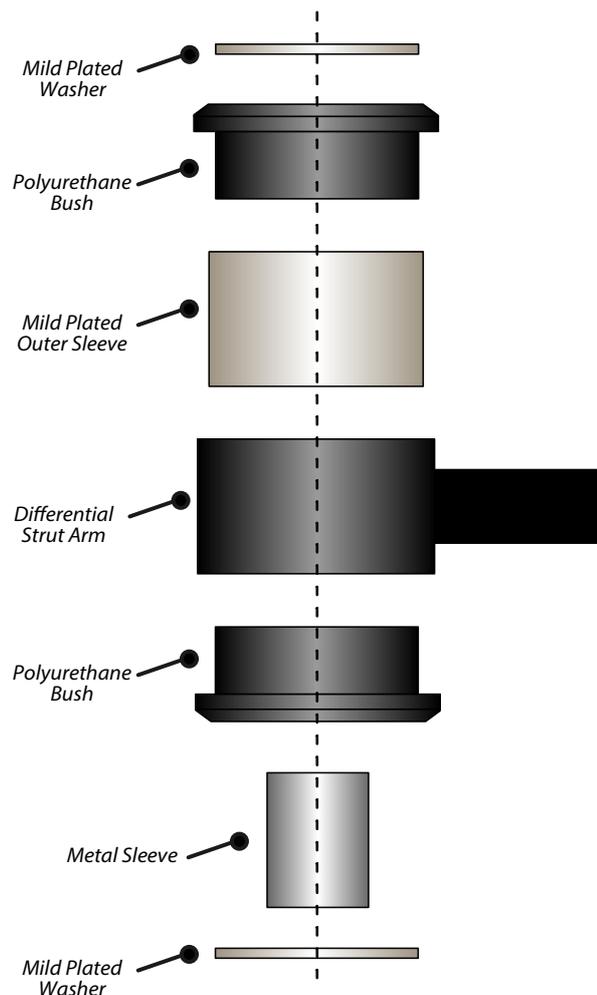


Figure 1